


H1essential Accessibility Installation Guide

Copyright(C) 2024 ZOOM CORPORATION. All Rights Reserved.


Proper display is not possible on grayscale devices.

Introduction


■Item to prepare

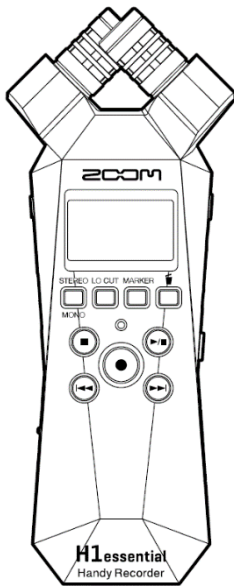

H1essential

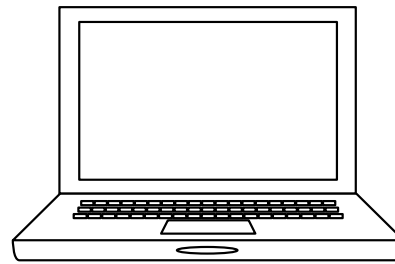

Windows or macOS computer
with Internet access

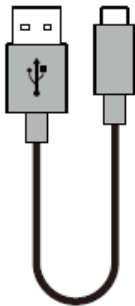

USB Type-C cable



microSD card

Supported recording media
microSDHC: 4 GB – 32 GB
microSDXC: 64 GB – 1 TB

Always format microSD cards on the H1essential after purchasing them new or using them with a different device.

■Accessibility installation process


1. Download the accessibility installation file.
2. Extract the ZIP file.
3. Copy the extracted accessibility installation file to a microSD card.
4. Install the guide sound accessibility feature.
5. Confirm that the guide sound accessibility feature has been installed correctly.

Installing the Guide Sound Accessibility Feature

This guide explains installing guide sound of English version 1.00 as an example.
If the H1essential firmware is old, update to the latest firmware before installing accessibility functions.

1. Download the accessibility installation file.



Download the ZIP file that contains the accessibility installation file from the H1essential download page.

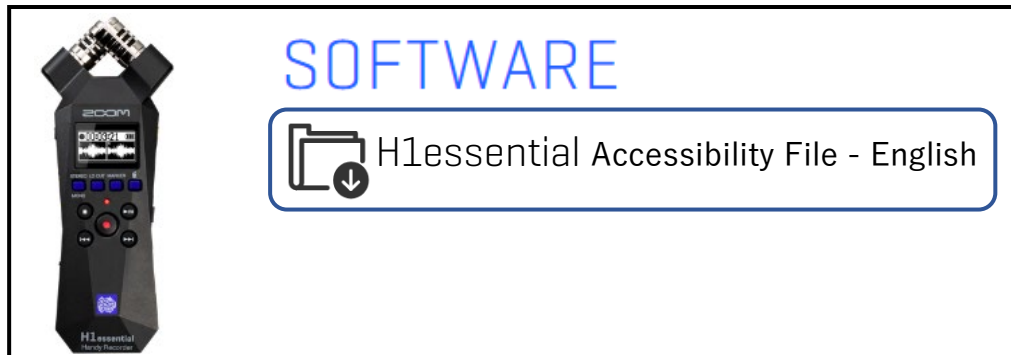


On Windows

2. Extract the ZIP file

Select the folder that contains the downloaded ZIP file. Click ① “Compressed Folder Tools” and then click ② “Extract all”. This extracts the ZIP file.

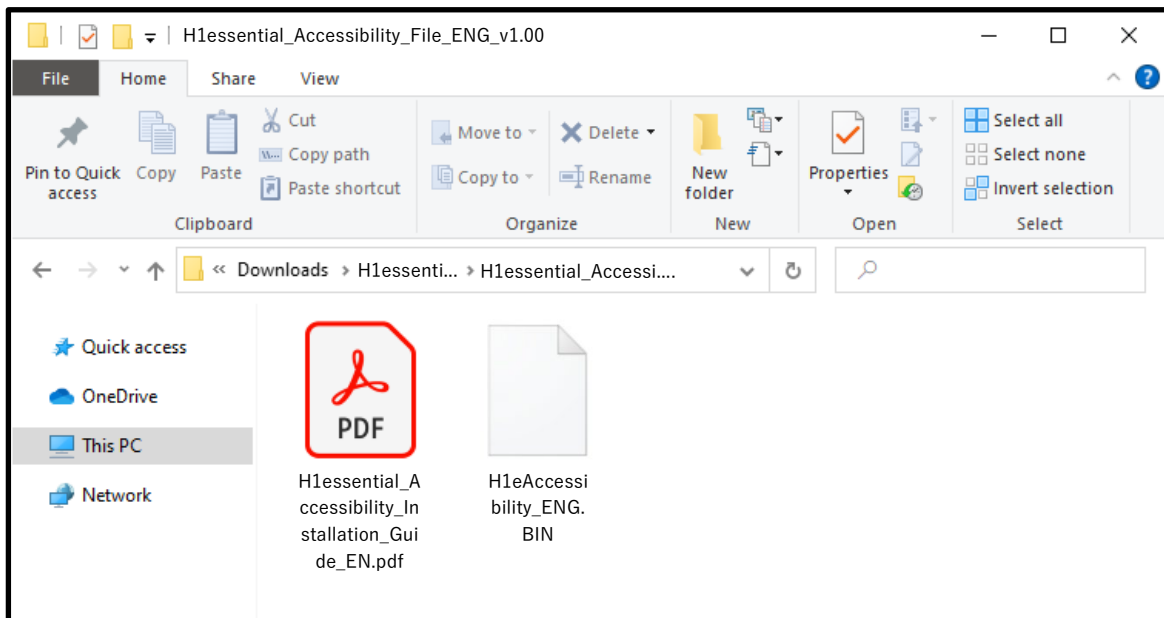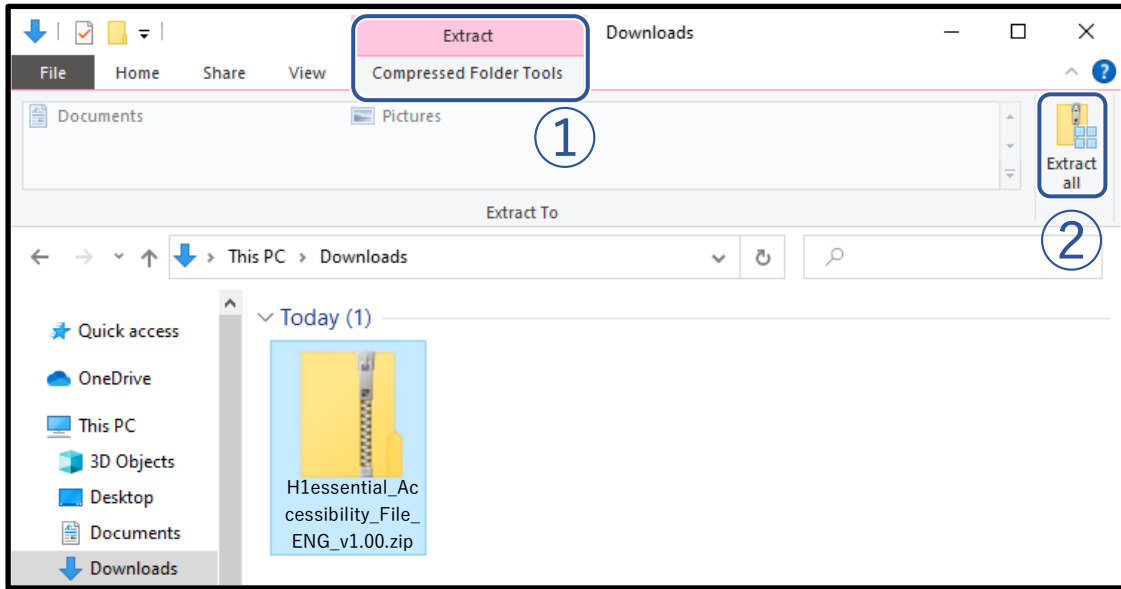

3. Copy the accessibility installation file to a microSD card.
Copy the “H1eAccessibility_ENG.BIN” file to a microSD card.

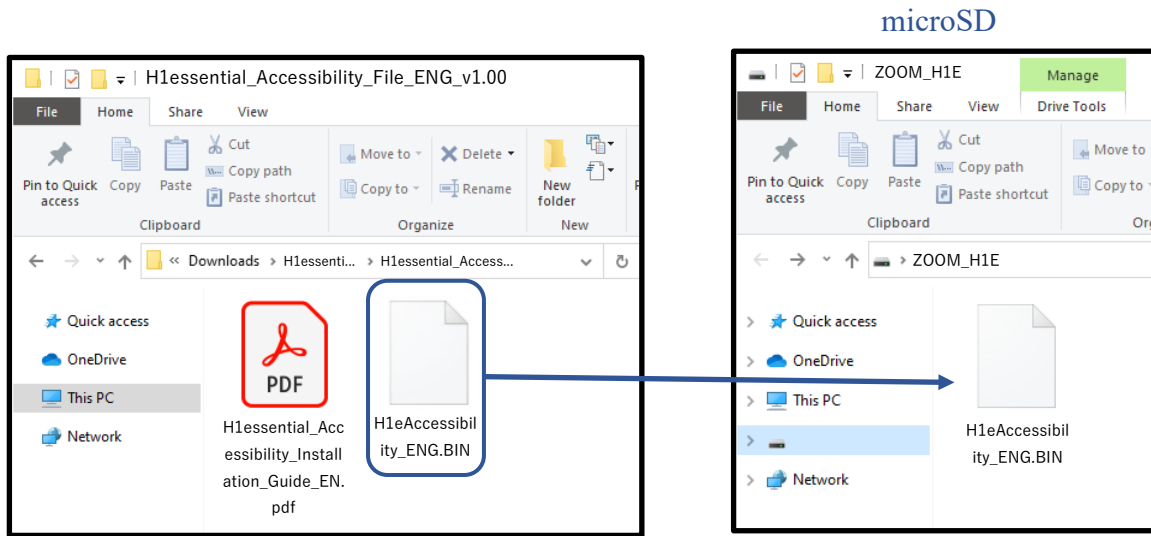


Accessibility installation file

Copy the accessibility installation file to a microSD card.

On macOS


2. Extract the ZIP file.

After downloading, open the ① “Downloads” folder which appears at the right end of the Dock by default. Then, click ②. Downloaded files will be shown.

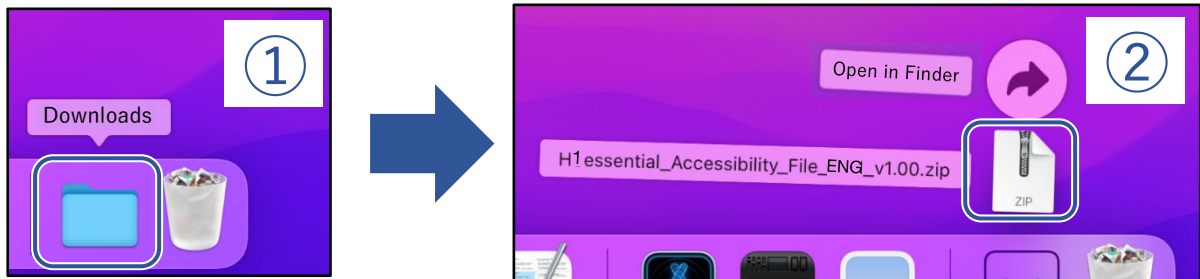

3. Copy the accessibility installation file to a microSD card.

Copy the “H1eAccessibility_ENG.BIN” file to a microSD card.

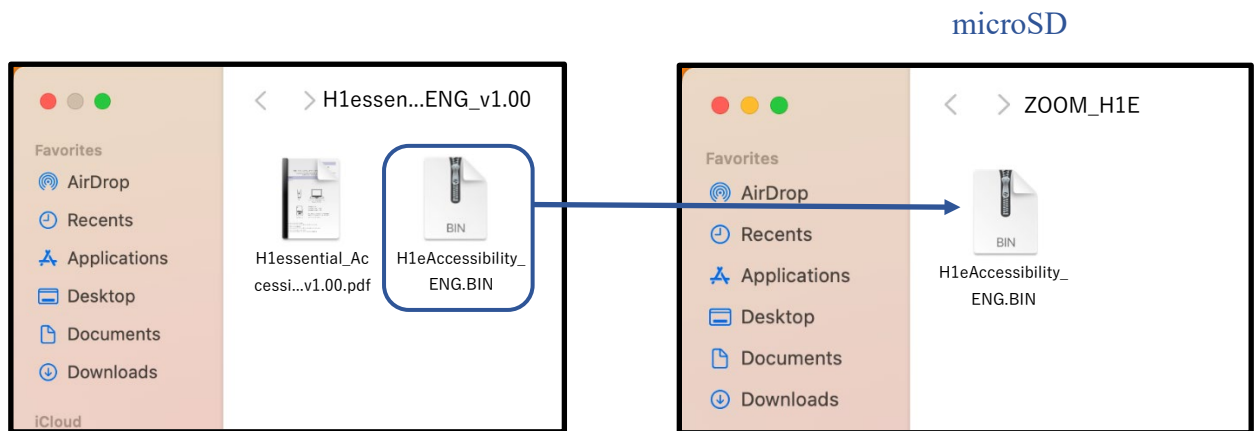

Accessibility installation file

Copy the accessibility installation file to a microSD card.


The following procedures are the same on both Windows and macOS.

4. Connect the power source (AC adapter, USB bus power or portable battery) to the USB port (Type-C) of H1essential.


NOTE

- When performing a accessibility installation using batteries, installation may not be possible depending on the remaining battery charge.


5. Insert the microSD card into the H1essential.

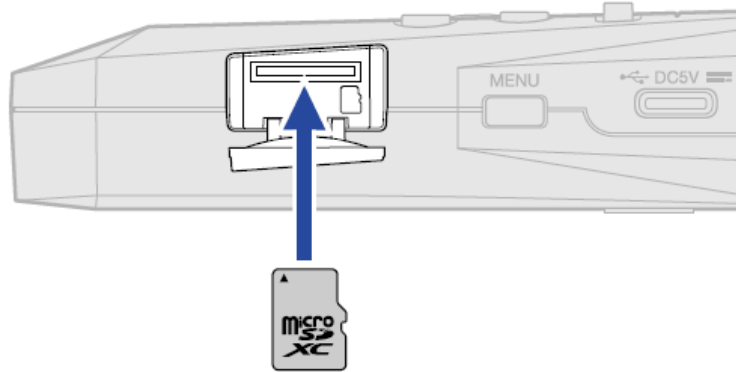

6. Slide  toward .

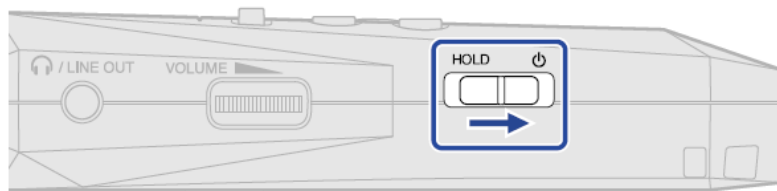

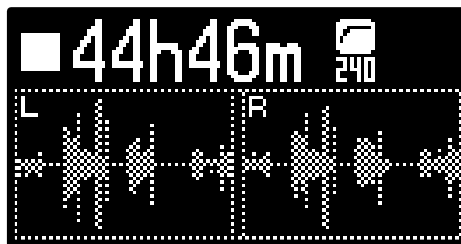


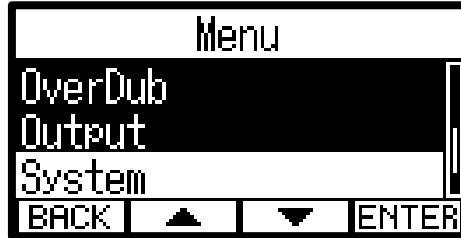
This turns the H1essential power on and opens the Home Screen on the display.






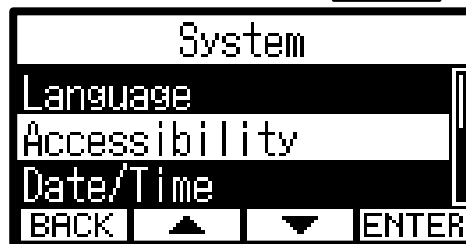
7. Press .




This opens the Menu Screen on the display.

8. Use  and  to select “System” and press  to confirm.



9. Use  and  to select “Accessibility” and press  to confirm.




10. Use  and  to select “Version” and press  to confirm.






11. Press  to confirm.



NOTE

 will not appear if the H1essential firmware is old.

Please update to the latest firmware before installing accessibility functions.

12. Use  and  to select “Execute” and press  to execute.



NOTE

During the accessibility installation, do not turn the power off or remove the microSD card.

If the installation fails, “Please Update Accessibility!” will appear.

If this happens, turn the power off once and confirm that the microSD card is loaded correctly.




Then, turn the power on and try installing again.


Confirm that the guide sound accessibility feature has been installed correctly




Check the guide sound information used by the H1essential.


1. Press .

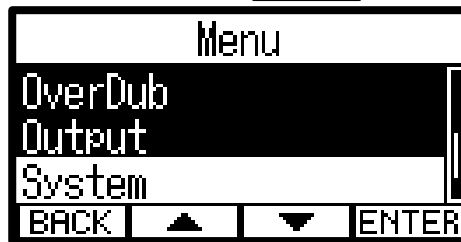


This opens the Menu Screen on the display.

2. Use  and  to select "System" and press  to confirm.

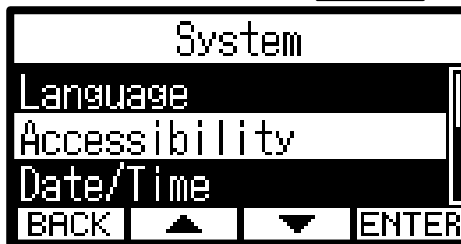

3. Use  and  to select "Accessibility" and press  to confirm.



4. Use  and  to select "Version" and press  to confirm.



5. Check the language and version used for the accessibility guide sound.



• ZOOM CORPORATION will bear no responsibility for any losses or third-party claims resulting from the use of this software. Moreover, distribution, sale, leasing, rental, alteration, and reverse engineering without permission of this software are prohibited. The specifications of this software and the contents of this document could be changed without notice in the future.

- Copying or reprinting this manual in part or in whole without permission is prohibited.
- Windows® is a trademark or registered trademark of Microsoft® Corporation.
- macOS® is a trademark or registered trademark of Apple Inc.
- microSDXC logos are trademarks of SD-3C LLC.
- Other product names, registered trademarks and company names in this document are the property of their respective companies.
- All trademarks and registered trademarks in this document are for identification purposes only and are not intended to infringe on the copyrights of their respective owners.
- The illustrations in these instructions might differ from actual screens.