





Version 1.3 Supplementary Manual

You must read the Usage and Safety Precautions before use.

© 2025 ZOOM CORPORATION

Copying or reprinting this manual in part or in whole without permission is prohibited.

Product names, registered trademarks and company names in this document are the property of their respective companies. All trademarks and registered trademarks in this document are for identification purposes only and are not intended to infringe on the copyrights of their respective owners.

Proper display is not possible on grayscale devices.

Functions revised in Version 1.3

Changed naming of audio files when long recordings are split

When the maximum file size (File Max Size) is exceeded, a new audio file will be created with a sequential number (long recording file number) added to its name rather than with the take number increased by one.

Resumption of audio interface mode when restarting enabled

If the unit was shut down during audio interface mode, this mode will automatically be reactivated when next started up.

Contents

Functions revised in Version 1.3	2
Naming of audio files when long recordings are split	3

Naming of audio files when long recordings are split

When the maximum file size (File Max Size) is exceeded during recording, the file will be split. Now, however, a sequential number (long recording file number) will be added to the audio file name.

See the operation manual for information about setting the maximum file size (File Max Size).

Version	Audio file name example (for stereo file)	Explanation
Previous version	Scene001_T002_Tr1_2.wav	① Take number
	1	The take number is advanced by one each time the file is split. (For example: T001, T002, T003)
Version 1.3	Scene001_T001_0002_Tr1_2.wav	① Sequential number (long recording file number) The long recording file number is advanced by one each time the file is split. (For example: 0001, 0002, 0003)

