 


# F8

## MultiTrack Field Recorder

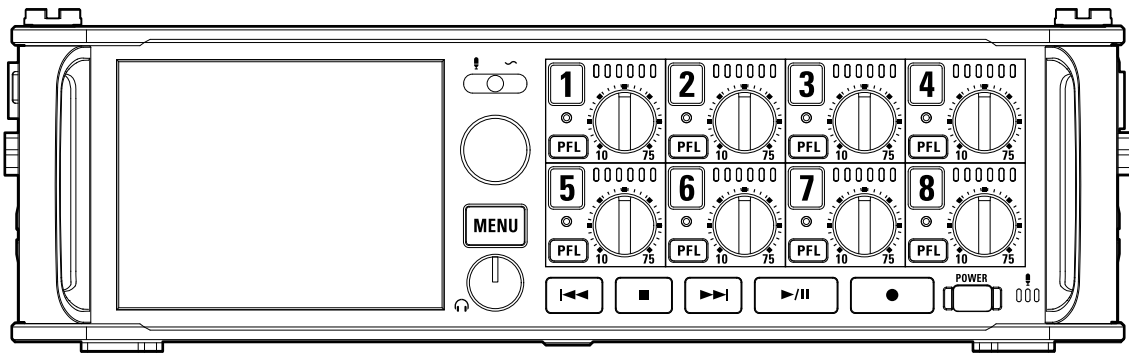

## Version 6.4 Supplementary Manual

You must read the Usage and Safety Precautions before use.

© 2025 ZOOM CORPORATION

Copying or reprinting this manual in part or in whole without permission is prohibited.

Product names, registered trademarks and company names in this document are the property of their respective companies. All trademarks and registered trademarks in this document are for identification purposes only and are not intended to infringe on the copyrights of their respective owners. Proper display is not possible on grayscale devices.

# Functions revised and added in Version 6.4

---

## Changed naming of audio files when long recordings are split

---

When the maximum file size (File Max Size) is exceeded, a new audio file will be created with a sequential number (long recording file number) added to its name rather than with the take number increased by one.

## Resumption of audio interface mode when restarting enabled

---

If the unit was shut down during audio interface mode, this mode will automatically be reactivated when next started up.

## Function added to show an SD card formatting menu at startup

---

An SD card formatting menu can be shown by pressing a specific button during startup.

# Contents

---

Functions revised and added in Version 6.4 .....	2
Naming of audio files when long recordings are split .....	3
Showing a menu to format SD cards at startup .....	3

# Naming of audio files when long recordings are split

When the maximum file size (File Max Size) is exceeded during recording, the file will be split. Now, however, a sequential number (long recording file number) will be added to the audio file name.

See the operation manual for information about setting the maximum file size (File Max Size).


Version	Audio file name example (for stereo file)	Explanation
Previous version	Scene001_T002_Tr1_2.wav ①	① Take number The take number is advanced by one each time the file is split. (For example: T001, T002, T003...)
Version 6.4	Scene001_T001_0002_Tr1_2.wav ①	① Sequential number (long recording file number) The long recording file number is advanced by one each time the file is split. (For example: 0001, 0002, 0003...)

 
## Showing a menu to format SD cards at startup



### NOTE

Be aware that all data on the SD card will be deleted when it is formatted.

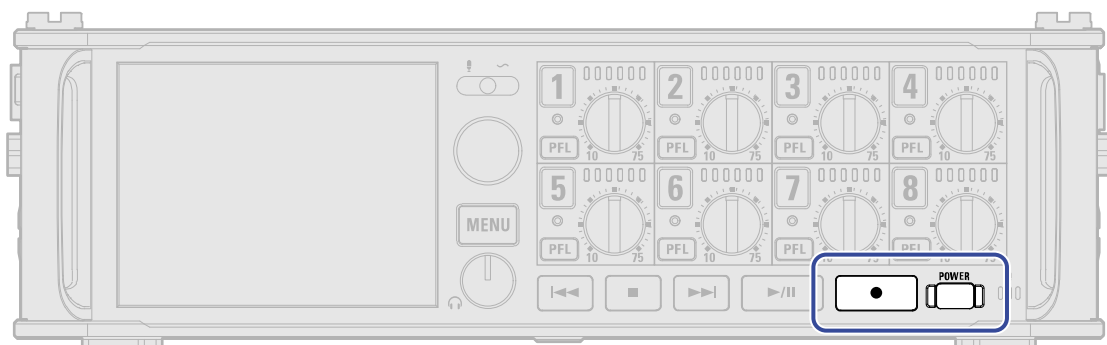

SD cards can be formatted by pressing a specific button during startup.

 
1. Insert an SD card.
2. Turn on the power while pressing the  (REC) button.



3. Use the  (selection encoder) to select the slot with the SD card to format. Then, press the  (selection encoder).



4. Use the  (selection encoder) to select "Yes". Then, press the  (selection encoder).

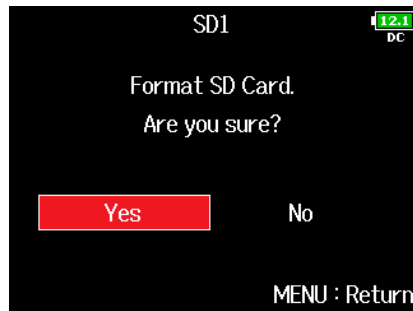

SD Card formatting will start.

---

**HINT**

SD cards can also be formatted from the Menu Screen.

---



4-4-3 Kanda-surugadai, Chiyoda-ku, Tokyo 101-0062 Japan  
[zoomcorp.com](http://zoomcorp.com)