

# L6max Firmware Update Guide

(C) 2025 ZOOM CORPORATION. All Rights Reserved.


Proper display is not possible on grayscale devices.

## Introduction


### ■ Items to prepare



L6max

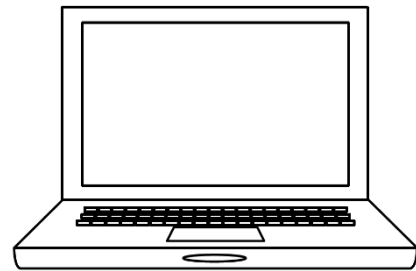

Windows or macOS computer  
with Internet access

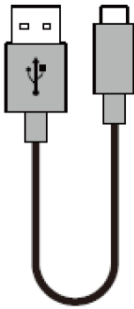

USB Type-C cable

Use a USB cable that supports data transfer. USB bus power is supported.



microSD card

Supported recording media

microSDHC: 4 GB – 32 GB

microSDXC: 64 GB – 2 TB

Always format microSD cards on the L6max after

purchasing them new or using them with a different device.

## Product part names

Refer to “Functions of parts” in the Operation Manual.

The Operation Manual can be downloaded from the L6max Support & Downloads page ([zoomcorp.com/help/l6max](https://zoomcorp.com/help/l6max)).

## Firmware update process

1. Download the firmware update file.
2. Extract the ZIP file.
3. Copy the extracted firmware update file to a microSD card.
4. Update the firmware.
5. Confirm that the firmware has been updated correctly.

## Updating the Firmware

**This guide explains firmware update to version 1.10 as an example.**

1. Download the firmware update file.

Download the ZIP file that contains the firmware update file from the L6max Support & Downloads page ([zoomcorp.com/help/l6max](https://zoomcorp.com/help/l6max)).





### Software

-  **L6max Firmware**  
System Version 1.10
-  **L6max Driver | Windows**  
Windows 10/11 (64bit)
-  **ZOOM L6 Editor | Windows**  
Windows 10/11 (64bit)

## On Windows


### 2. Extract the ZIP file.

Select the folder that contains the downloaded ZIP file. Click ①“Compressed Folder Tools” and then click ②“Extract all”. This extracts the ZIP file.

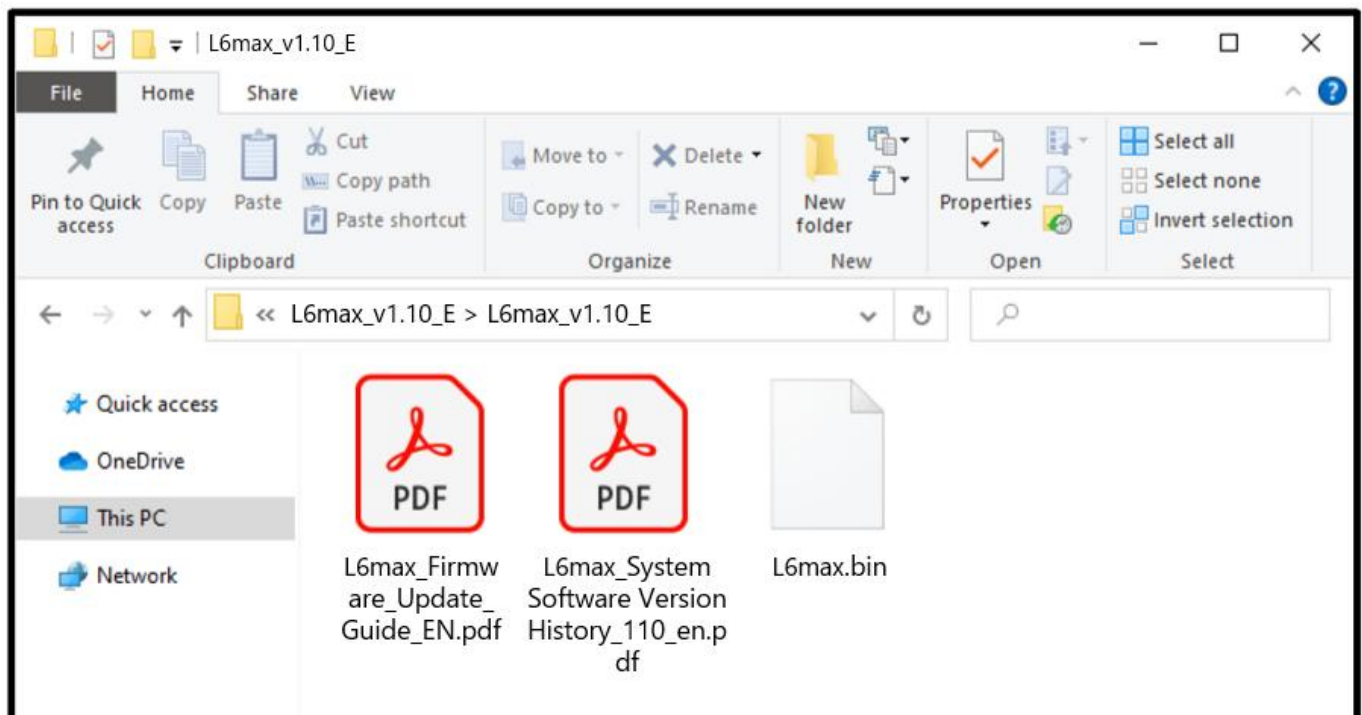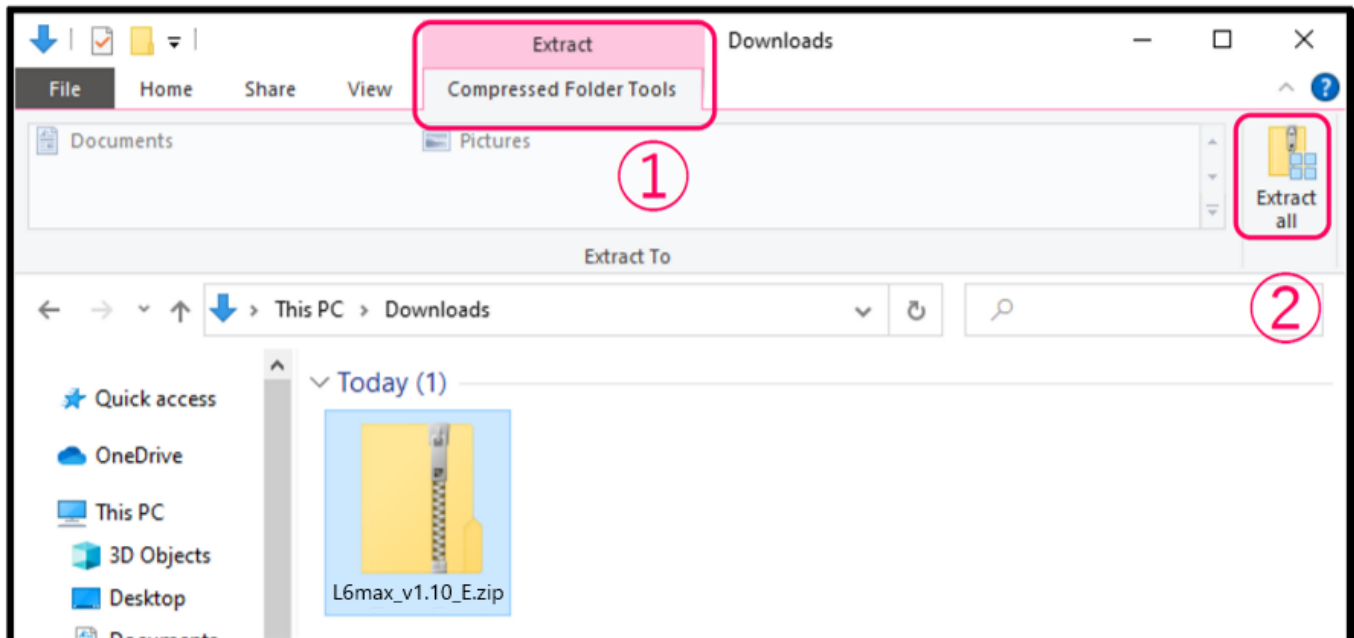


3. Copy the firmware update file to a microSD card.  
Copy the “L6max.BIN” file to a microSD card.

microSD

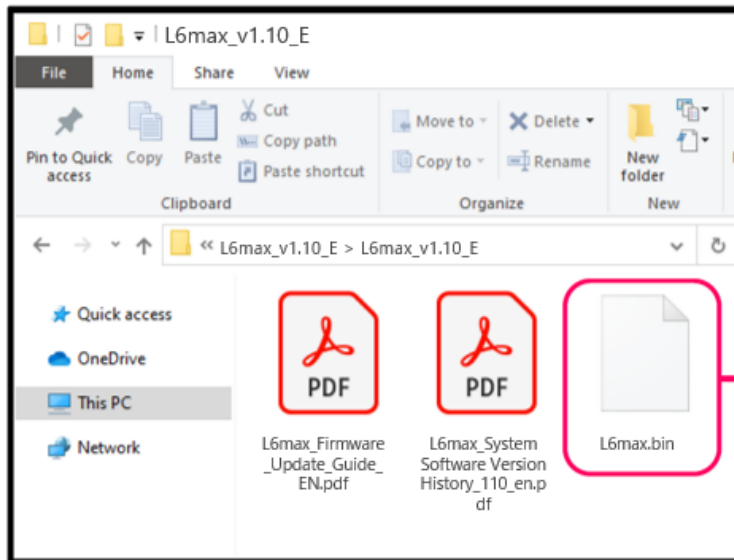

Firmware update file

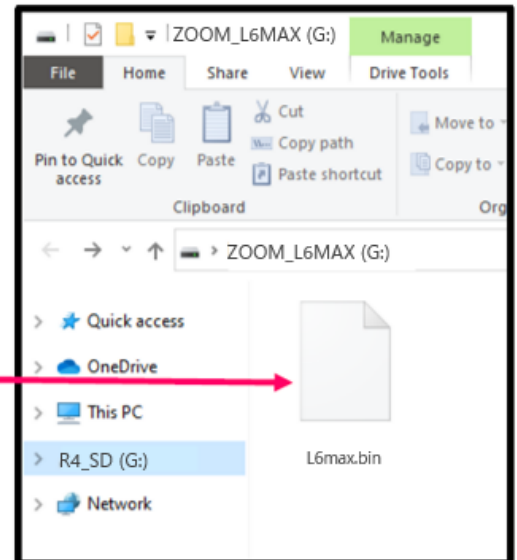

Copy the firmware update file  
to a microSD card.

## On macOS


### 2. Extract the ZIP file.

After downloading, open the ①“Downloads” folder which appears at the right end of the Dock by default.  
Then, click ②“L6max\_v1.10\_E”. Downloaded files will be shown.



### 3. Copy the firmware update file to a microSD card.

Copy the “L6max.BIN” file to a microSD card.

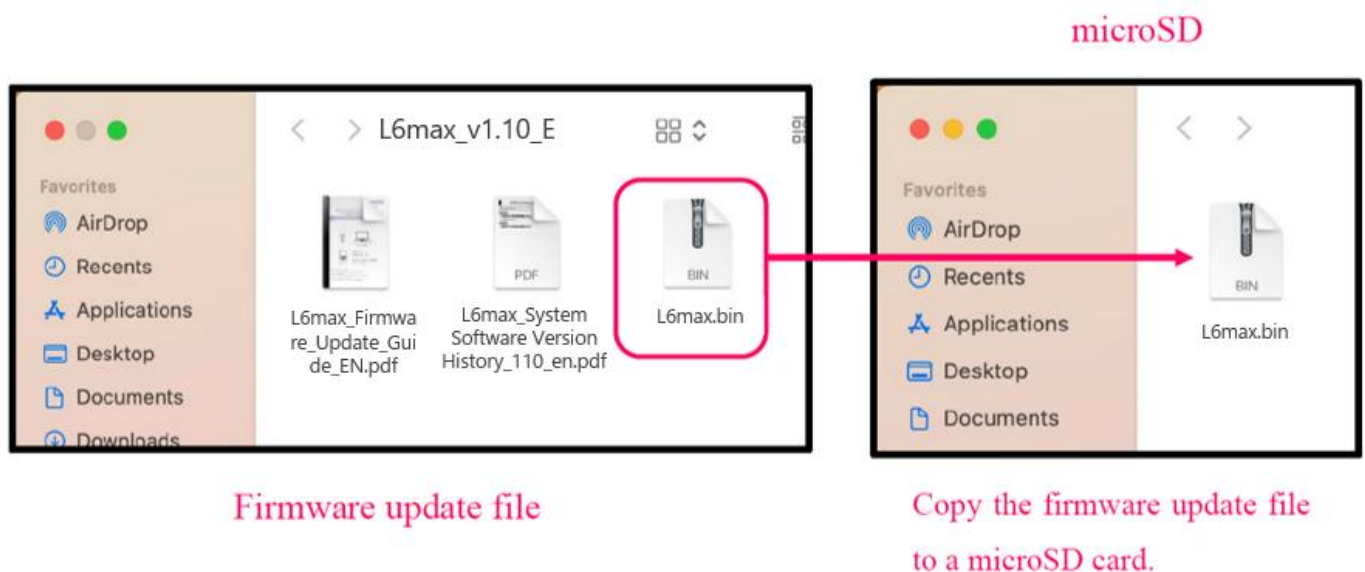


## The following procedures are the same on both Windows and macOS.


4. Connect the power source (AC adapter, USB bus power or portable battery) to the USB port (Type-C) of L6max.

### NOTE

•When performing a firmware update using batteries, the update may not be possible depending on the remaining battery charge.


5. Insert the microSD card into the L6max.

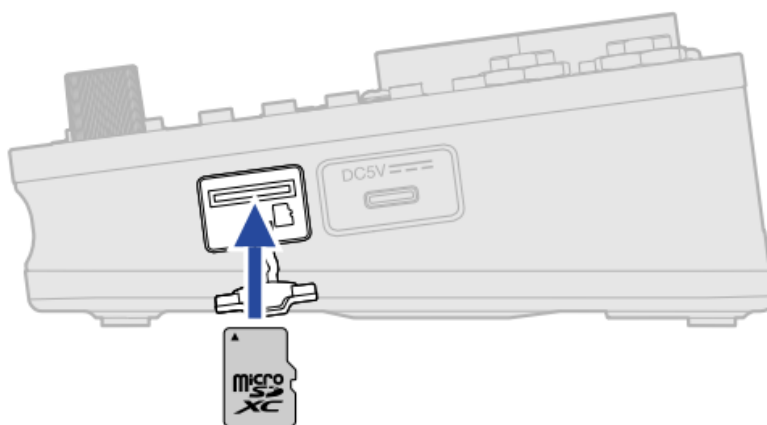




6. Press the  (POWER) button until the display lights.

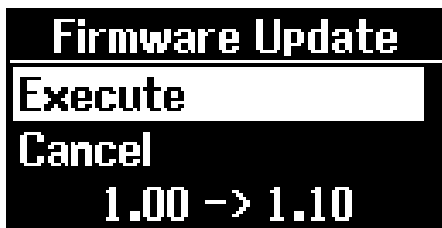

This opens the firmware update confirmation screen.




7. Use  (operation button 2) and  (operation button 3) to select “Execute”, and press  (operation button 4) to confirm.

### HINT

Even if “Cancel” is selected, the firmware can still be updated from the System Settings Screen .

(→ [Updating the firmware from the System Settings Screen](#))


8. Press the  (POWER) button until the display becomes unlit.

This turns off the power for the L6max.

9. Press and hold the  (POWER) button again to turn the power on.


The update will start automatically, and the  (record) button will blink slowly.


After about 1 minute, the Completion Screen will open.

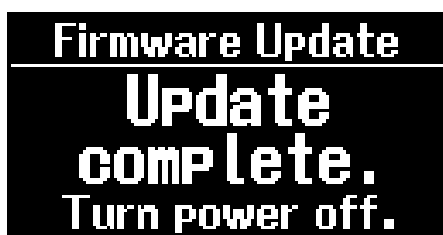


### NOTE


During the firmware update, do not turn the power off or remove the microSD card.

If the update fails, the  (record) button will blink rapidly. If this happens, turn the power off once and confirm that the microSD card is loaded correctly. Then, turn the power on and try updating again.

10. Press and hold  (POWER) button and the power will turn off.

### NOTE

If the firmware update fails, when the power is turned on, the  (record) button might continue to blink and proper startup might not be possible. If this occurs, turn the power off. Then, turn it on again while pressing the

 (play/stop) button. This will start the update.


## Updating the firmware from the System Settings Screen


1. Connect the power source (AC adapter, USB bus power or portable battery) to the USB port (Type-C) of L6max.


### NOTE




•When performing a firmware update using batteries, the update may not be possible depending on the remaining battery charge.

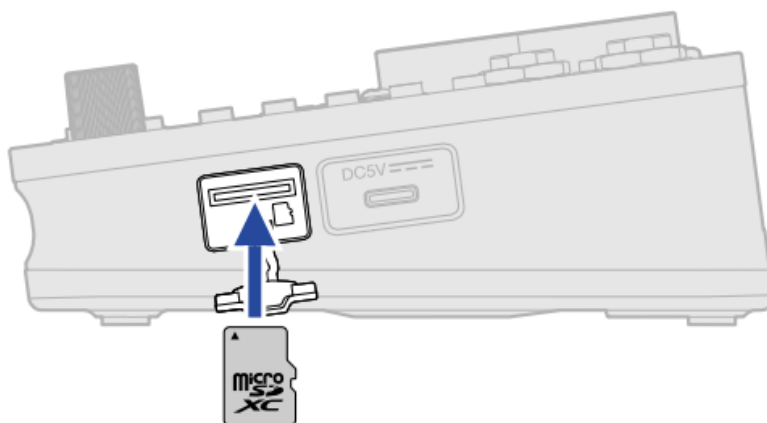2. Insert the microSD card into the L6max.






3. Press the  (POWER) button until the display lights.  
This turns on the power for the L6max.


4. Press  (operation button 1) on the Home Screen.  
This opens the Menu Screen.

5. Use  (operation button 2) and  (operation button 3) to select “System”, and press  (operation button 4) to confirm.








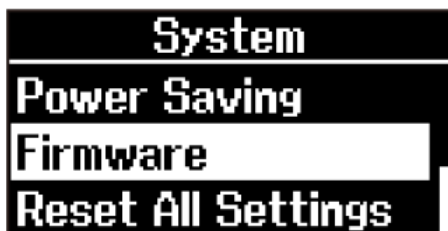

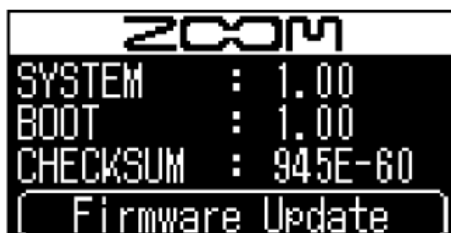

6. Use  (operation button 2) and  (operation button 3) to select “Firmware”, and press  (operation button 4) to confirm.





This shows the firmware versions.



7. Use  (operation button 2) and  (operation button 3) to select “Firmware Update”, and press  (operation button 4) to confirm.

8. Use  (operation button 2) and  (operation button 3) to select “Execute”, and press  (operation button 4) to confirm.

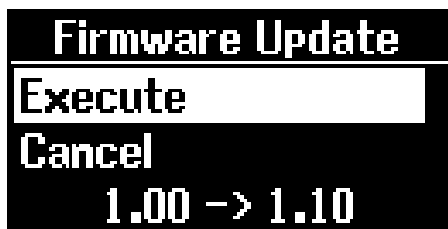

9. Press the  (POWER) button until the display becomes unlit.

This turns off the power for the L6max.


10. Press and hold the  (POWER) button again to turn the power on.


The update will start automatically, and the  (record) button will blink slowly.

After about 1 minute, the Completion Screen will open.




### **NOTE**

During the firmware update, do not turn the power off or remove the microSD card. If the update fails, the  (record) button will blink fast. If this occurs, turn the power off once and confirm that a microSD card is installed correctly. Then, turn the power on again and retry updating.


- 11.** Press and hold  (POWER) button and the power will turn off.




### **NOTE**

If the firmware update fails, when the power is turned on, the  (record) button might continue to blink and proper startup might not be possible. If this occurs, turn the power off. Then, turn it on again while pressing the




 (play/stop) button. This will start the update.


## Confirming that the firmware was updated correctly

1. Press  (operation button 1) on the Home Screen.  
This opens the Menu Screen.


2. Use  (operation button 2) and  (operation button 3) to select “System”, and press  (operation button 4) to confirm.



3. Use  (operation button 2) and  (operation button 3) to select “Firmware”, and press  (operation button 4) to confirm.

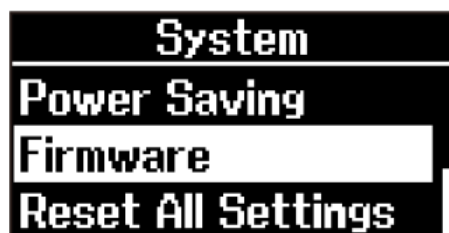

4. Check the firmware version.

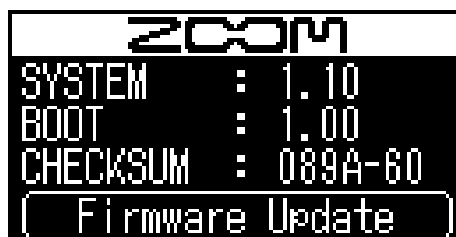

• ZOOM CORPORATION will bear no responsibility for any losses or third-party claims resulting from the use of this software. Moreover, distribution, sale, leasing, rental, alteration, and reverse engineering without permission of this software are prohibited. The specifications of this software and the contents of this document could be changed without notice in the future.

- Copying or reprinting this manual in part or in whole without permission is prohibited.
- Microsoft and Windows are trademarks of the Microsoft group of companies.
- Mac is a trademark of Apple Inc.
- The microSDXC logo is a trademark of SD-3C LLC.
- USB Type-C is a trademark of the USB Implementers Forum.
- Other product names, registered trademarks and company names in this document are the property of their respective companies.
- All trademarks and registered trademarks in this document are for identification purposes only and are not intended to infringe on the copyrights of their respective owners.
- The illustrations and display screens in this document could differ from the actual product.
- The contents of this document and the specifications of the product could be changed without notice.
- Recording from copyrighted sources, including CDs, records, tapes, live performances, video works and broadcasts, without permission of the copyright holder for any purpose other than personal use is prohibited by law. ZOOM CORPORATION will not assume any responsibility related to infringements of copyrights.