

H1essential Version 1.2 Supplementary Manual


Proper display is not possible on grayscale devices.

Function added in Version 1.2

Turning the guide sound on/off with a shortcut

This function allows the guide sound to be turned on/off anytime to suit the use situation.

1. When the HOME screen is open, press and hold .

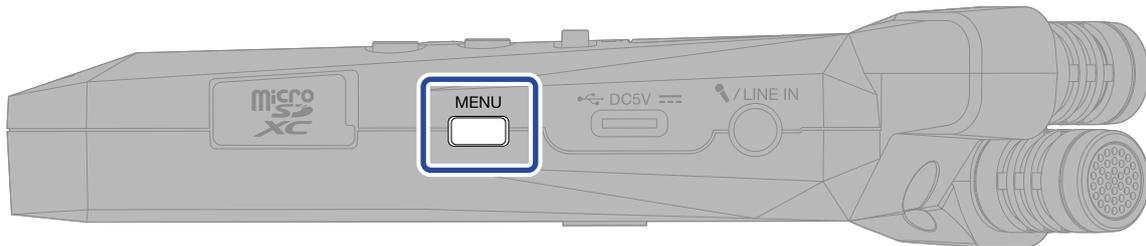

This turns on/off the guide sound.



Home Screen



A notification about the switch will be shown (and announced with the guide sound).