

## H4essential Version 1.1 Supplementary Manual


Proper display is not possible on grayscale devices.

## **Function added in Version 1.1**


## Turning the guide sound on/off with a shortcut

This function allows the guide sound to be turned on/off anytime to suit the use situation.

**1.** When the HOME screen is open, press and hold ENTER

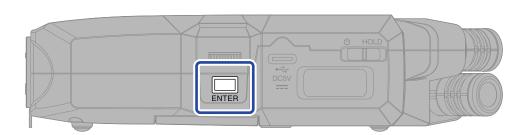

This turns on/off the guide sound.

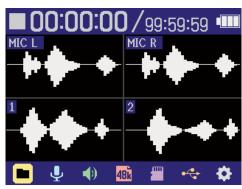

Home Screen





A notification about the switch will be shown (and announced with the guide sound).