

H6studio

Handy Recorder



Quick Tour


Software and documents related to this product can be viewed on the following website.



zoomcorp.com/help/h6studio

You must read the Usage and Safety Precautions before use.

Inserting microSD cards

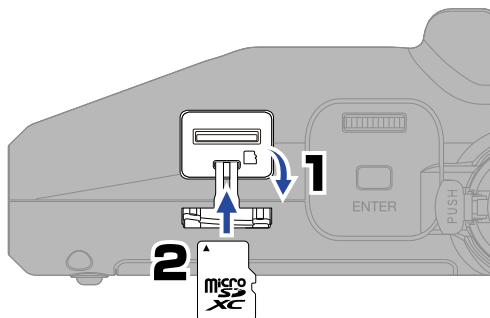

Supported recording media:


microSDHC memory cards

microSDXC memory cards


We recommend using microSD cards that have been confirmed to work with this product. See the ZOOM website (zoomcorp.com/help/h6studio).

- Always turn the power off before inserting or removing a microSD card.
- To remove a microSD card, push it further into the slot and then pull it out. Be careful not to let the microSD card pop out.


Turning the power on

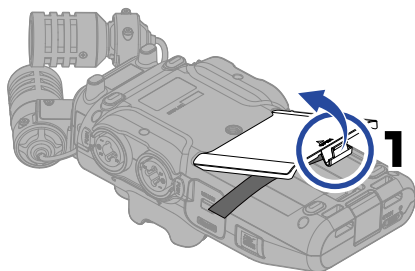


Open while pressing up.

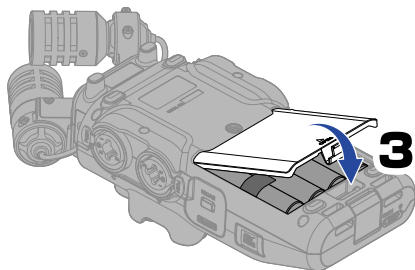

Replace the battery cover.

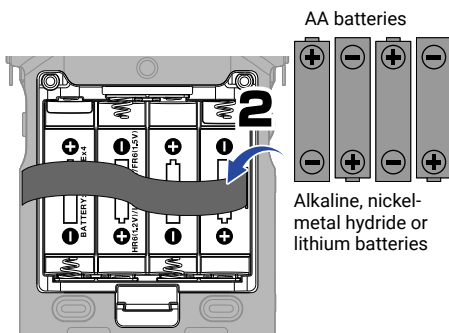


Extend the battery ribbon underneath.

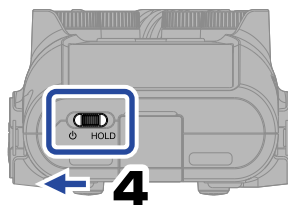

Turn the power on.

Take the following precautions to prevent breakdown and leakage when using batteries.




Do not use batteries if their covers are coming off or their exteriors are damaged.



Do not mix batteries of different types or made by different manufacturers.




Do not use new and old batteries together.

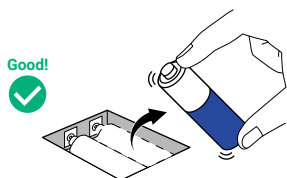




Remove dead batteries as soon as possible. Remove batteries when not using them for a long time.

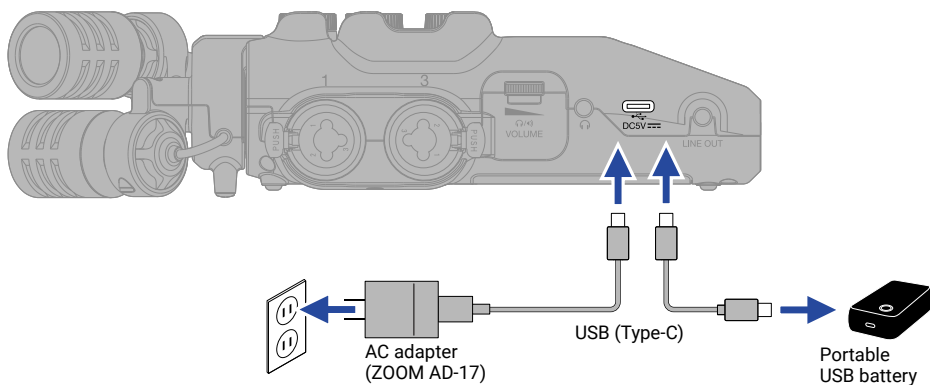A dedicated AC adapter (ZOOM AD-17) or a commercially-available portable USB battery can also be used.



Making settings when first turned on

Use  (select) and  (confirm/execute) according to the screen.

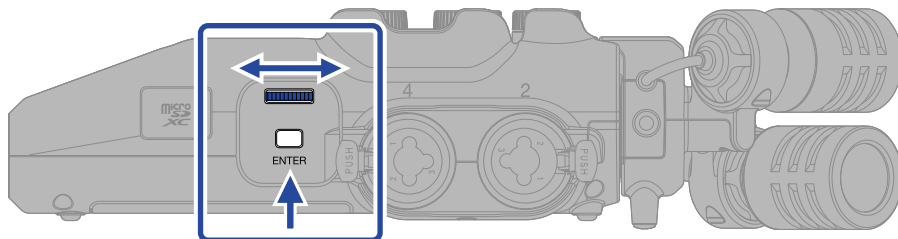

Accessibility setting




A function that enables setting audio guidance and beep sounds is included to assist users with vision impairments.

Adjust the volume by turning the




Language setting




Press  to return to the previous screen.

Date format setting

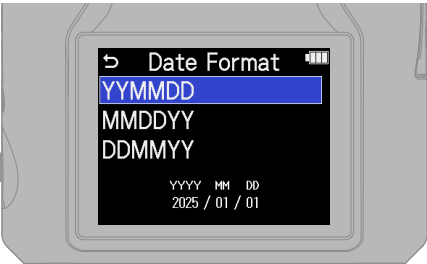


The year, month and day will be used in recording file names in the order set here.


Date and time settings

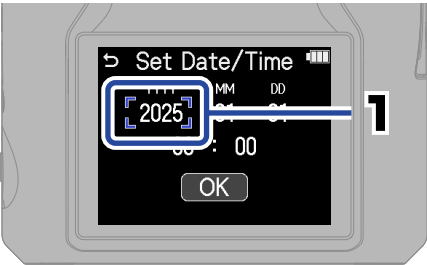

Select a setting item and confirm.

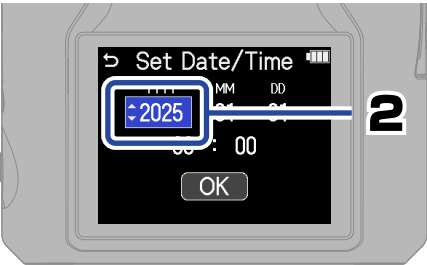

Change the value and confirm.

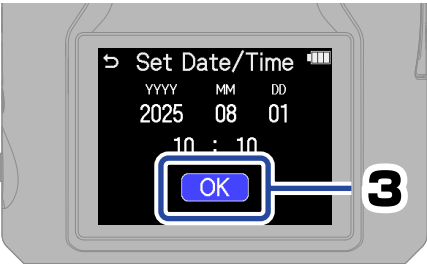

After setting all the items, select "OK" to complete setting the date and time.





Battery type setting




Set the type of battery used correctly so that the amount of remaining battery charge can be shown accurately.


SD card testing

When a microSD card that has not been used with the H6studio before is loaded in it, an SD card testing screen will open. We recommend conducting a quick test because it can check the performance of a microSD card in about 30 seconds regardless of its capacity.

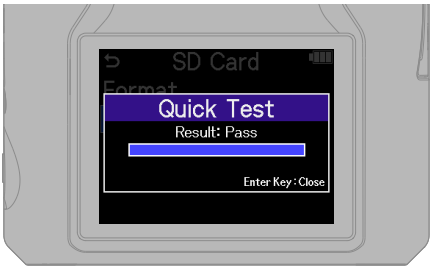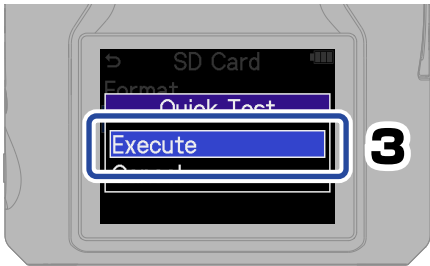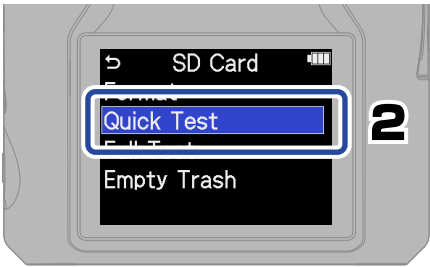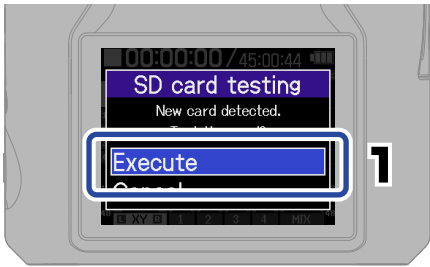


When the quick test is complete, press  to close the screen.


A full test will check the entire microSD card, so the amount of time required depends on its capacity (about 1.5 hours for 64 GB). SD card tests can be conducted any time from the settings screen related to microSD cards.


After testing completes,  can be pressed to return quickly to the Home Screen from any other screen.


After settings are complete, the Home Screen will open.

■ Home Screen

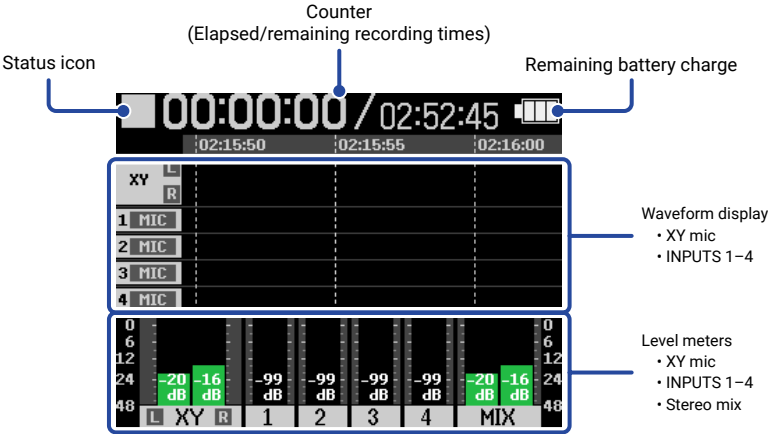




Turn  to show the Menu Bar at the top of the screen.

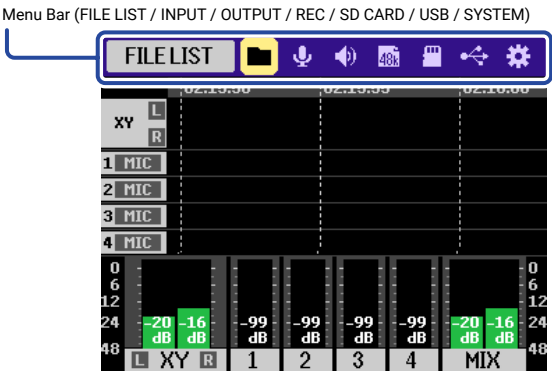


Press and hold  when the Home Screen is open to immediately turn on/off the guide sound.

Preparing to record

Connecting equipment

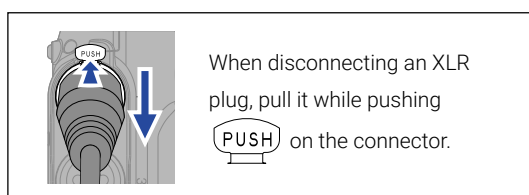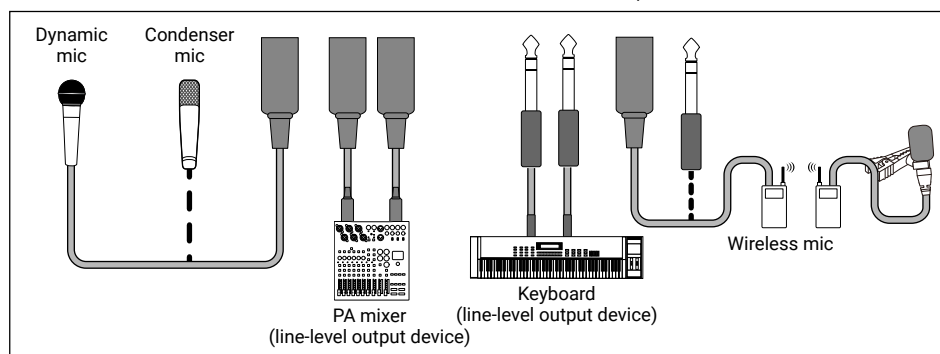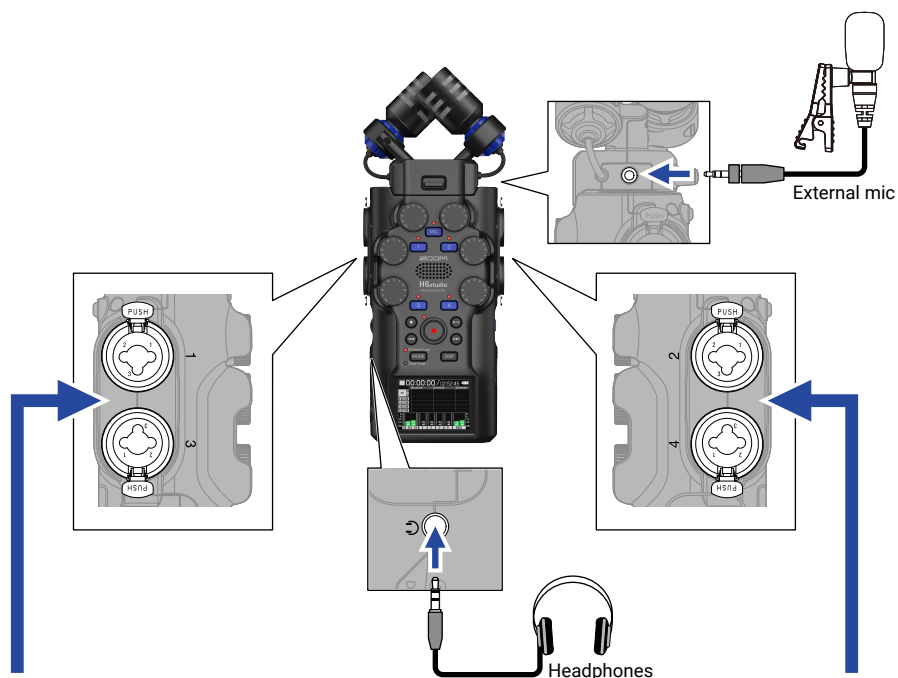


Enabling tracks for recording

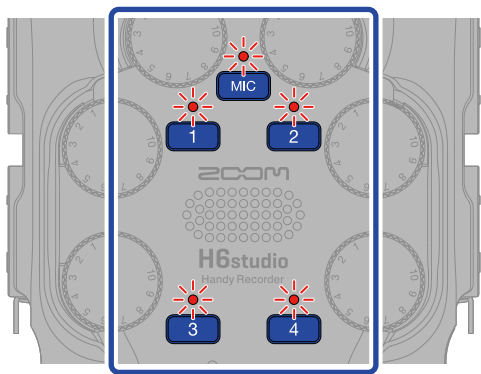

The indicator will light red, showing it is ready to record.

Selecting the recording mode


Press ☐ 16/24bit Fixed **MODE** ☐ 32bit Float to select the recording mode.

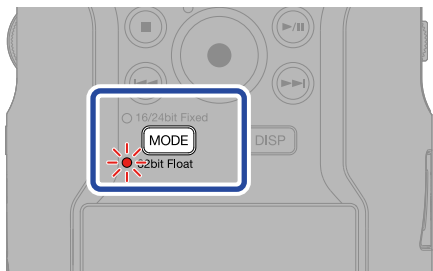

Use  to select and  to confirm.


- When 32bit Float is selected, audio files will not be clipped.
- When 16/24bit Fixed is selected, the data size of recorded files will be smaller, but recording levels must be adjusted to prevent clipping.

Making input settings

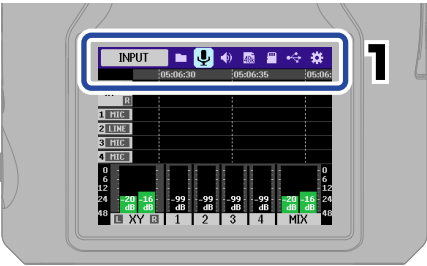


Turn  to show the menu bar and select .









For the XY mic: Select 

For INPUTS 1–4:

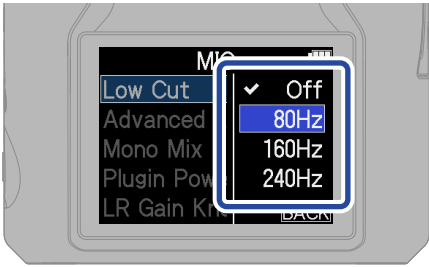Select  – 

The following procedures are for setting the low cut function.
Make other settings in the same way. (→ “ [Input settings](#)”)



- Press  /  to select the previous/next item (on most screens).
-  ,  or  can be pressed to return quickly to the Home Screen (from most screens).


■ Input settings

Setting items	MIC	INPUTS 1-4	Explanation
Mic/Line		<input type="radio"/>	Set according to the connected device. Mic: Use when connecting a mic Line: Use when connecting mixers, keyboards and other line-level output equipment
+48V On/Off		<input type="radio"/>	Turn this on when condenser mics are connected.
Low cut	<input type="radio"/>	<input type="radio"/>	This can reduce wind noise and vocal pops.
Advanced Limiter	<input type="radio"/>	<input type="radio"/>	This limiter is optimized to prevent distortion by detecting the maximum level in advance.
Mono Mix	<input type="radio"/>		This mixes the XYH-5s mic sound to mono.
Plugin power	<input type="radio"/>		Turn this on when a mic that is compatible with plug-in power is connected to the MIC/LINE IN jack on the XY mic.
1&2 (3&4) Link		<input type="radio"/>	When set to "Stereo", a stereo file will be recorded with INPUT 1 (or 3) as L and INPUT 2 (or 4) as R.
1&2 (3&4) Gain Knob Link		<input type="radio"/>	When "On", the levels of INPUT 1 and 2 (or 3 and 4) can be adjusted together using only the INPUT 1/2 (or 3/4) GAIN knob.
LR Gain Knob Link	<input type="radio"/>		When "Off", the XY mic L and R levels can be adjusted separately using the two left and right MIC GAIN knobs.


Do not supply phantom power to devices that are not compatible with it. Doing so could damage those devices.

■ Tips to improve recording sound quality


If the H6studio is placed directly on a table, reflected sound might interfere with recording and reduce clarity. We recommend using a tripod, for example, to distance it from the table. Placing something like a handkerchief can also be effective in reducing sound reflected from a table.

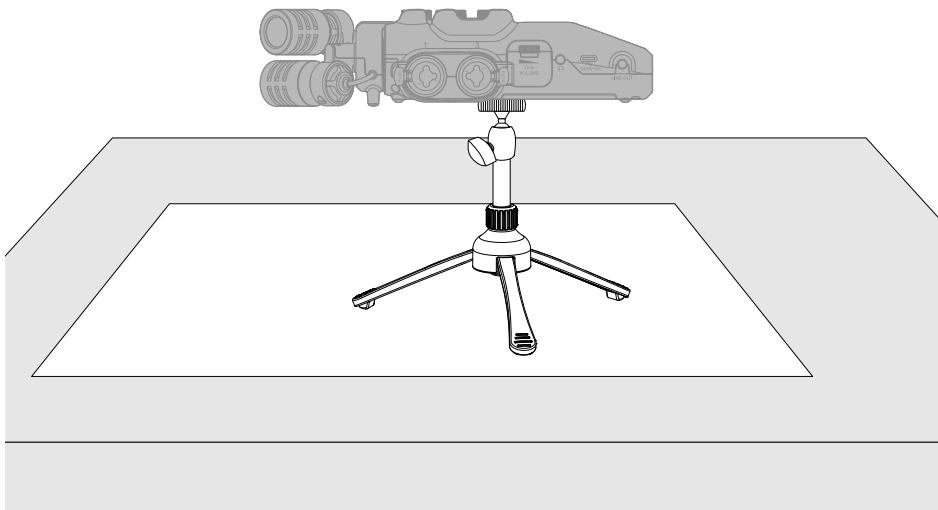

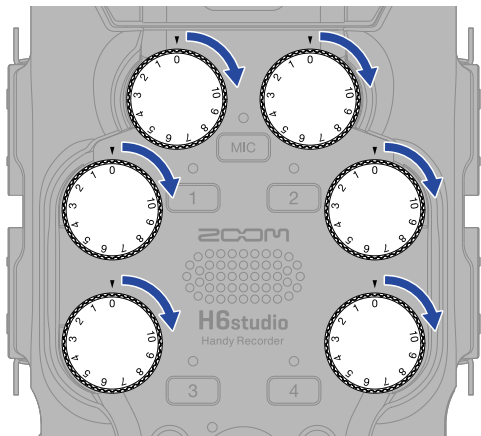


Adjusting levels

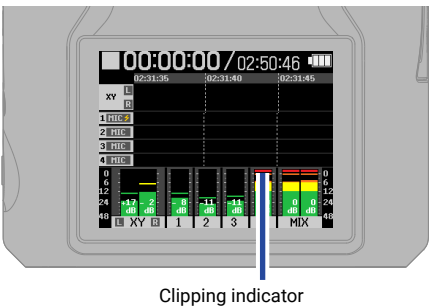


Confirm that the level meters are moving.
Adjust the overall level balance.




- Adjusting levels will affect the monitored sound and the recording data.
- When 16/24bit Fixed is selected, adjust them so that the level meters are around -12 dB at maximum volume. Clipping indicators will light if recording levels reach 0 dB. Lit clip indicators will be turned off by pressing and holding the  (STOP) button or by operating the  (GAIN) knobs.
- When 32bit Float is selected, status indicators will blink if clipping occurs in the hardware. If the "Mic/Line" input setting is set to "Mic", switching the setting to "Line" could prevent hardware clipping.
- Levels can be adjusted even when recording by using .


■ Adjusting the monitoring volume

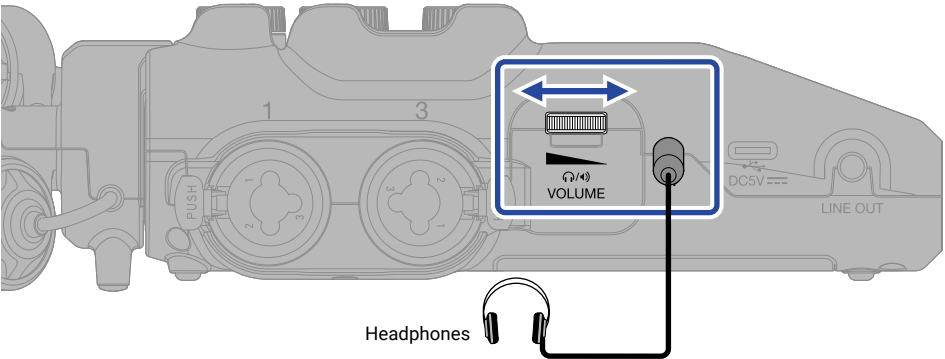


Recording

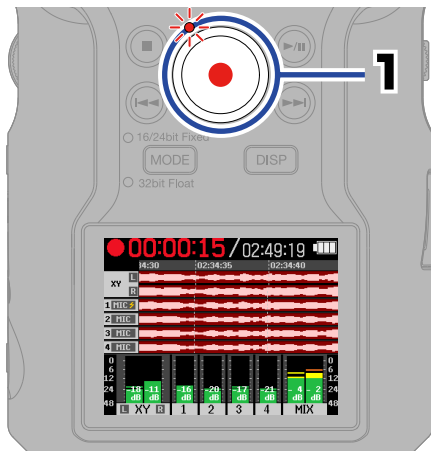


The indicator will light red when recording starts.

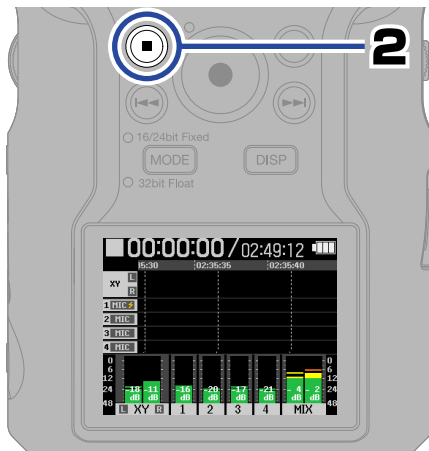





This stops recording.

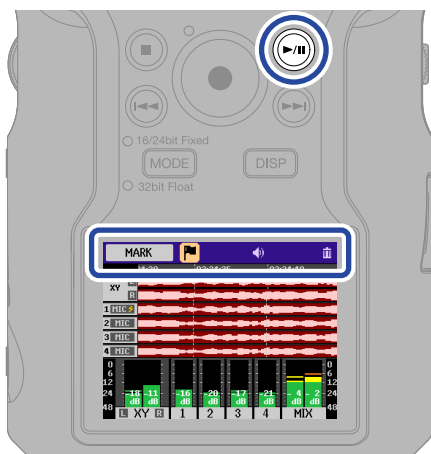Slide  toward HOLD to prevent misoperation when recording.

■ Using the Recording Screen




	Pause and resume recording. Marks are added when recording is resumed.
 MARK	Add a mark for playback cueing.
 OUTPUT	Set the line output.
 TRASH	Stop recording and move the file to the trash.

Playing recordings




This starts playback.

■ Using the Playback Screen

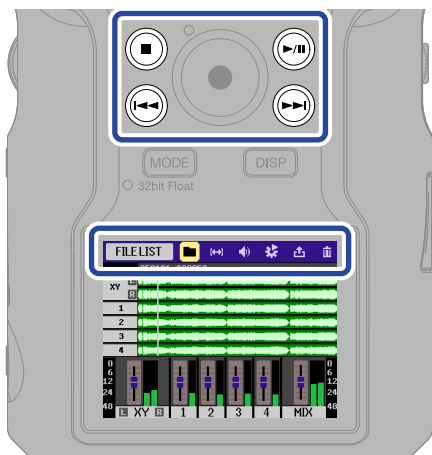


	Stop playback.
	Start and pause playback.
	Move to the previous file, the file beginning, or the previous mark. Press and hold to search backward.
	Move to the next file or the next mark. Press and hold to search forward.
FILE LIST	Open the FILE LIST Screen.
AB REPEAT	Set a specified range (A-B) and repeat playback.
OUTPUT	Set the line output.
OPTION	Normalize the volume and set the mode and speed of playback.
EXPORT	Convert and export files.
TRASH	Move the file to the trash.

To use the mixer, turn  to move the selection to a fader during playback.

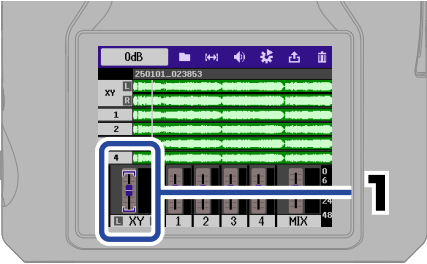


Select a track.

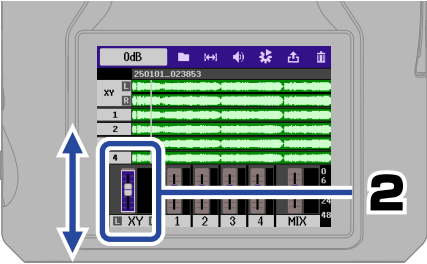

Confirm the track and adjust.



Mixer settings will be saved automatically in each playback file.

Press  to stop playback and return to the Home Screen.

Showing the 2D code for online help

Select Help from the SYSTEM menu to show a 2D code.


Scan it with a smartphone to access detailed documents about the product.

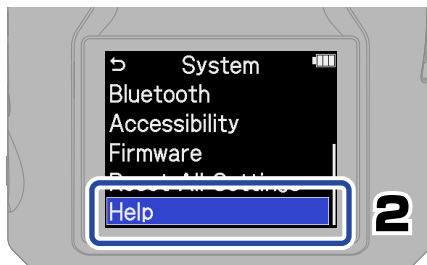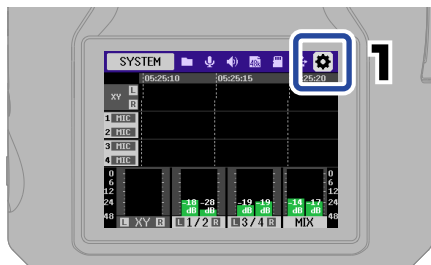

zoomcorp.com/help/h6studio

Functions of parts

■ Front

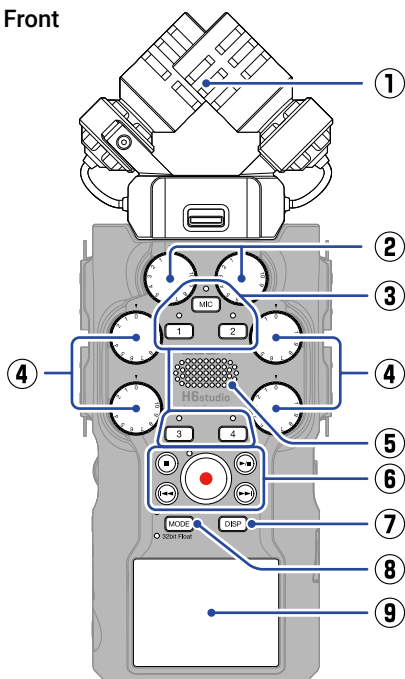

① XY mic capsule (XYH-5s)

This stereo mic has two crossing directional mics. This mic can record three-dimensional sound with natural depth and width.

② MIC GAIN knobs

Use these to adjust the MIC input levels.

③ Track buttons and status indicators

Press a track button, lighting its status indicator red, to enable that track for recording.

④ INPUT 1-4 GAIN knobs






Use these to adjust the input levels of INPUTS 1-4.

⑤ Speaker

This outputs sound during file playback. If headphones are connected to the

Headphone jack, sound will not be output from the speaker.

⑥ Other buttons

 STOP button	This stops recording and playback.
 PLAY/PAUSE button	This starts and pauses playback of recorded files.
 REC button and indicator	This starts recording. The indicator lights during recording. Press this when recording to stop recording.
 REWIND button	Press this during playback or when paused to move to the previous file, the beginning of the file, or the previous mark. Press and hold to search backward.
 FAST FORWARD button	Press this during playback or when paused to move to the next file or the next mark. Press and hold to search forward.

⑦ DISPLAY button

The Home Screen and Playback Screen can be set to show level meters only, waveforms only or level meters and waveforms.


⑧ Recording MODE button and indicators

Select 16/24bit Fixed or 32bit Float for recording files.

⑨ Display

This shows various types of information.

■ Left side

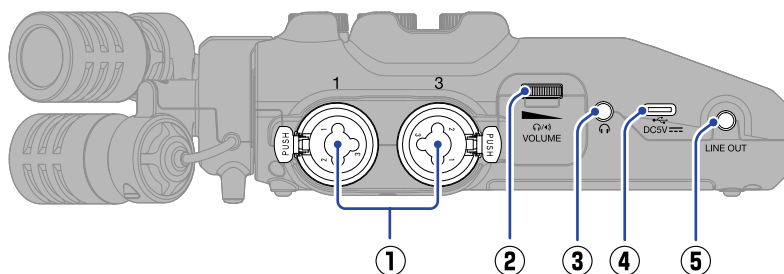

① INPUT 1 and 3 jacks

Connect mics and instruments to these. These support XLR and 1/4-inch phone (TRS) plugs.

② VOLUME dial

Use this to adjust the volume output from the speaker and headphones.

③ Headphone jack

This can output sound to headphones.

④ USB port (Type-C)


Connect this to a computer, smartphone or tablet to use audio interface and file transfer functions.

This supports operation on USB bus power. Use a USB cable that supports data transfer.

⑤ LINE OUT jack

This outputs sound to a connected device.

■ Right side

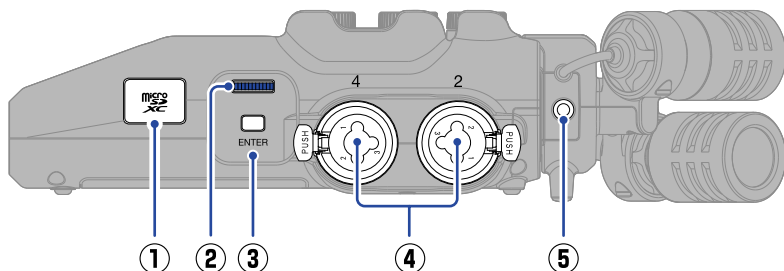

① microSD card slot

Insert a microSD card here.

② Selection dial

Use this to select items.

③ ENTER button

Press this to confirm items.


④ INPUT 2 and 4 jacks

Connect mics and instruments to these. These support XLR and 1/4-inch phone (TRS) plugs.

⑤ MIC/LINE IN jack

If an external mic or line device is connected here, it can be used to record instead of the XY mic. This can also provide plug-in power to mics that require it.

■ Bottom

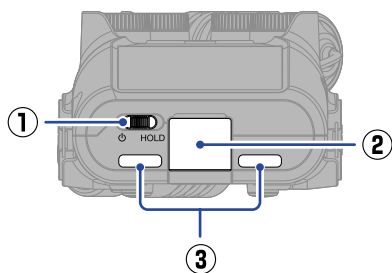

① **POWER/HOLD switch**

Use this to turn the power on/off and to disable button operation.

② **REMOTE connector**


The following functions become possible if a ZOOM BTA-1 or another dedicated adapter (sold separately) is connected here.

- Wirelessly control the H6studio from an iPhone/iPad using the ZOOM Handy Control & Sync app.
- Record timecode in H6studio files by connecting an UltraSync BLUE made by ATOMOS/Timecode Systems.

③ **Strap hole**

Use this to attach a strap.

■ Back

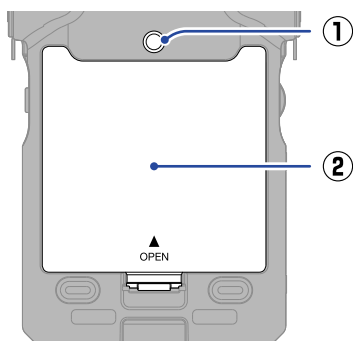

① **Tripod socket**

Use this for mounting on a tripod.

② **Battery cover**

Open this when installing and removing AA batteries.

Other functions

■ USB functions


• Audio interface

Connected to a computer, smartphone or tablet, this can be used as a 2-in/2-out or 6-in/2-out audio interface.

A driver must be installed to connect with Windows computers. The latest driver can be downloaded from the ZOOM website (zoomcorp.com/help/h6studio).

• File transfer


By connecting with a computer, smartphone or tablet, files on the microSD card can be checked and moved.

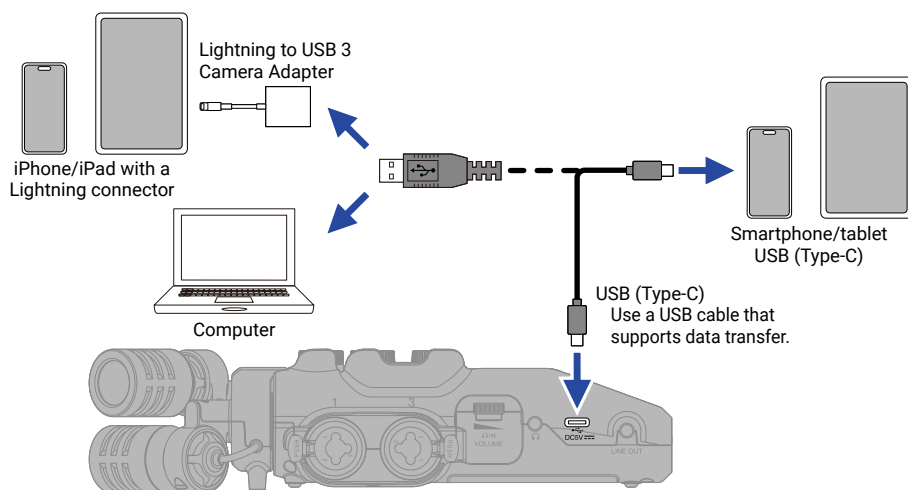

■ Connecting a dedicated wireless adapter (BTA-1)

• ZOOM Handy Control & Sync app for iPhone/iPad


The H6studio can be controlled wirelessly from an iPhone/iPad.

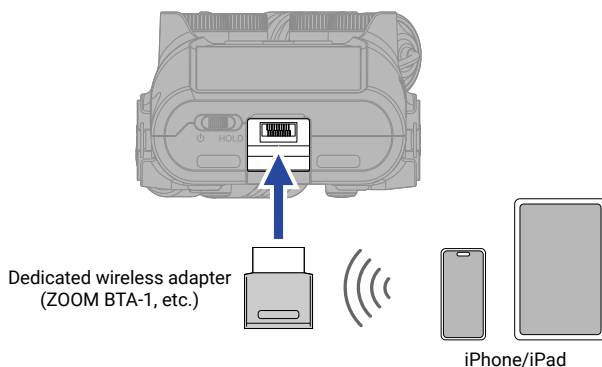




• UltraSync BLUE


The UltraSync BLUE made by ATOMOS/Timecode Systems transmits timecode, which is received by both the H6studio and the video camera, resulting in timecode being recorded in both audio data and video data.

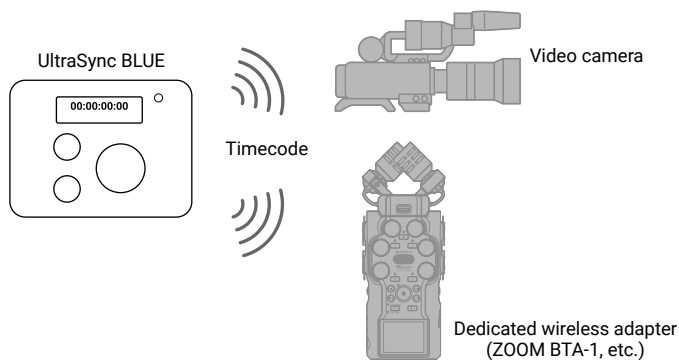The timecode is transmitted and received by Bluetooth.



Troubleshooting

Problem	Resolution
Sound is not output or the volume is very low	Confirm that a cable is connected properly to the headphone or line output. If sound is not output even when cables are connected properly, wires in the cables might be broken. Replace the headphones or cable.
	Confirm that the headphone volume and line output level are not too low.
	Confirm that the cables connecting the other devices with the INPUT 1–4 and MIC/LINE IN jacks are connected properly. If sound is not output even when cables are connected properly, wires in the cables might be broken. Replace the cables.
	Enable the MIC and/or INPUT 1–4 tracks. Use  to adjust the input levels. Check the mic/line settings.
	Check the mic orientation and the volume setting of the connected equipment.
	Supply phantom power to condenser mics.
	Supply plugin power to mics that use it.
Monitored sound is distorted	Check the mixer settings during playback. Sound will not be output if faders are lowered or tracks are muted.
	If monitoring at a high volume, use the  dial to lower the output volume.
	Use  to adjust the input levels. Check the mic/line settings.
"MIC INPUT OVERLOAD!" or "INPUT 1 (2/3/4) OVERLOAD!" appears	The input sound is too loud. Increase the distance between the mic and the sound source or lower the volume of the connected device.
	Wind can also cause loud noises to be input. We recommend using the low cut setting to reduce noise if air is blown directly at a mic when recording outdoors or when the mic is near the mouth of a speaker, for example. We also recommend putting on a windscreen.
Recording is not possible	Enable the MIC and/or INPUT 1–4 tracks.
	Confirm that the microSD card has open space.
	Confirm that a microSD card is loaded properly in the card slot.

Problem	Resolution
The recorded sound breaks up	Use the card testing function on the unit and use a card that passes the test. See the Operation Manual for details.
	We recommend using microSD cards that have been confirmed to work with this product. See the ZOOM website (zoomcorp.com/help/h6studio).
A recorded file is broken	If the power is interrupted or another problem occurs during recording, affected files might be restored to normal by loading the microSD card in the H6studio because files are automatically saved at regular intervals.
Not recognized when connected to a smartphone or tablet by USB	Use a USB cable that supports data transfer. Charging cables cannot be used for data transmission.
Date and time become reset	Data stored in the unit will be reset if power is not supplied by an AC adapter or batteries for a long time, and the power supply for date and time retention becomes depleted. If the Set Date/Time Screen appears during startup, set them again.
Operation is not possible	Confirm that  is not set to HOLD.

Microsoft and Windows are trademarks of the Microsoft group of companies.

iPad and Lightning are trademarks of Apple Inc.

The iPhone trademark is used under license from Aiphone Co., Ltd.

UltraSync BLUE is a trademark of ATOMOS/Timecode Systems Limited.

The Bluetooth® word mark and logo are registered trademarks of Bluetooth SIG, Inc., and these marks are used under license by ZOOM CORPORATION.

The microSDXC logo is a trademark of SD-3C LLC.



USB Type-C is a trademark of the USB Implementers Forum.

Other product names, registered trademarks and company names in this document are the property of their respective companies.

All trademarks and registered trademarks in this document are for identification purposes only and are not intended to infringe on the copyrights of their respective owners.

Recording from copyrighted sources, including CDs, records, tapes, live performances, video works and broadcasts, without permission of the copyright holder for any purpose other than personal use is prohibited by law. ZOOM CORPORATION will not assume any responsibility related to infringements of copyrights.

The illustrations and display screens in this document could differ from the actual product.

ZOOM®

ZOOM CORPORATION

4-4-3 Kanda-surugadai, Chiyoda-ku, Tokyo 101-0062 Japan

zoomcorp.com